




Model:

# EP800 **G1+**

Product Type:

## ELECTRIC ROTARY POLISHER 800W 700-2500RPM

### PARTS BREAKDOWN Ver.151021

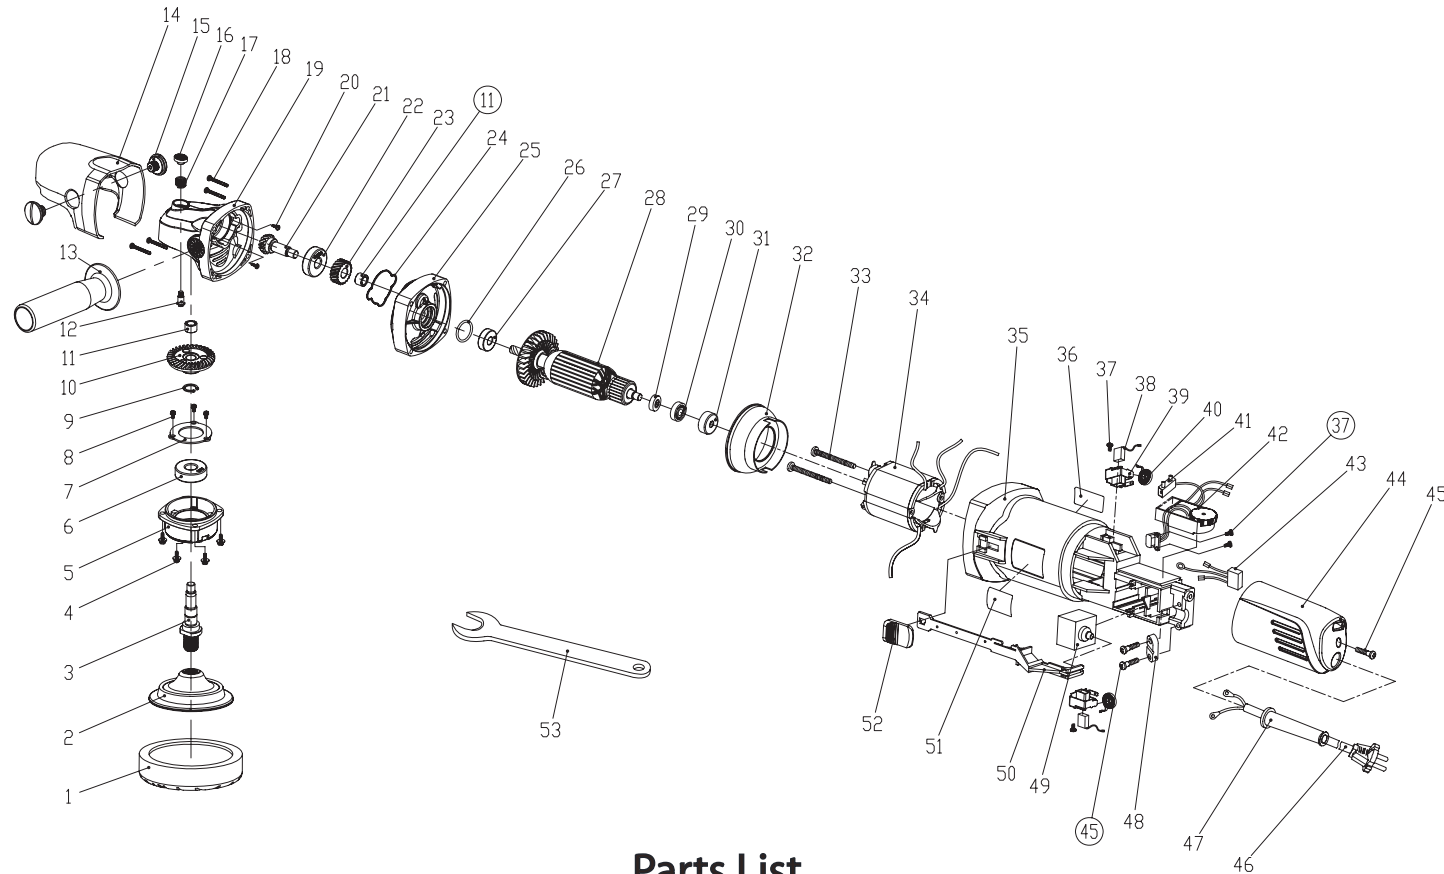

### Parts List

No.	Description	Qty	No.	Description	Qty	No.	Description	Qty
1	Foam Pad		19	Gear Case	1	37	Screw ST3x8	4
2	Backing Plate	1	20	Screw M4x8	2	38	Carbon Brush	2
3	Output Shaft	1	21	Pinion	1	39	Carbon Brush Holder	2
4	Screw M4x14	4	22	Ball Bearing 6200RS-2RS	1	40	Coil Spring	2
5	Gear Case Cover	1	23	Bevel Gear	1	41	Terminal Block PA7	1
6	Ball Bearing 6201-2RS	1	24	Sealing Ring	1	42	Speed Controller Assembly	1
7	Bearing Clamp	1	25	Bearing Retainer	1	43	Capacitor (for 230V~)	1
8	Screw M4x10	3	26	O-Ring Φ21.2xΦ1.8	1	44	Rear Cover	1
9	C-Clip For Shaft 12#	1	27	Ball Bearing 608-D1	2	45	Screw ST4.2x14	3
10	Gear	1	28	Armature	1	46	Power Supply Cord	1
11	Bush 8x12x8	2	29	Magnetic Ring	1	47	Cord Jacket	1
12	Spindle-Lock Pin	1	30	Ball Bearing 607-2RZ	1	48	Cord Clamp	1
13	Side Handle	1	31	Rubber Bearing Seat	1	49	Switch	1
14	Case Plastic Cover	1	32	Wind Baffle	1	50	Switch Push Lever	1
15	Plastic Screw M10	2	33	Screw ST4.2x70	2	51	Brand Label	1
16	Lock Pin Cap	1	34	Field Coil	1	52	Switch Push Button	1
17	Pin Spring	1	35	Field Coil Case	1	53	Wrench 17	1
18	Screw ST4.2x40	4	36	Data Label	1			



Model:

# EP800 **G1+**

Product Type:

## ELECTRIC ROTARY POLISHER 800W 700-2500RPM



### WARNING



Study, understand and follow all instructions provided with this product. Read these instructions carefully before installing, operating, servicing or repairing this tool. Keep these instructions in a safe accessible place.

### INTENDED USE OF THE TOOL

This tool cleans, polishes, waxes. Intended for use for buffing and polishing wax to bring out the shine of the surface, to remove minor imperfections such as scratches and dings by rubbing them out, to polish existing finish around imperfection to blend them so that they become almost unnoticeable and to polish after repainting.



### WARNING



#### Caution: To help prevent personal injury

- **Normal use of this product is likely to expose the user to dust and/or microscopic particles containing chemicals to cause cancer, birth defects or other reproductive harm.** Always wear appropriate safety equipment and clothing when using this product. Study, understand and follow all instructions provided with this product. Failure to read and follow all warnings and operating instructions may result in damages and serious injury or death.
- **Always wear safety approved goggles** when using this product. (Users and Bystanders).
- **Never use this tool for any application other than for which it was designed.**
- **Only use accessories designed for this tool.**
- **Never alter or modify this tool in any way.**
- **Improper operation and/or maintenance of the tool, modification of the tool, or use of the tool with accessories not designed for it could result in serious injury or death.**
- **Always select the correct accessories of the correct size and design for the job that you are attempting to perform.**
- **Always work in a clean, safe, well-lit, organized and adequately equipped area.**
- **Do not begin repairs without assurance that vehicle is in secure position, and will not move during repair.**

### Unpacking

When unpacking, check the parts diagram and part number listing on page 4 to make sure all parts are included. If any parts are missing or damaged, please call your distributor.

### PRODUCT INFORMATION:

- Professionally manufactured for the automotive paint care industry
- Ergonomically designed to reduce fatigue in long term operation
- Unit provides several different hand-held positions which facilitates polishing at various angles
- Lightweight only 4-1/4lb. (2.0kg)
- Designed to maintain constant output speed
- Provides two times the torque of a single gear set polisher
- Comes with one 5" Flexible Edge Backing Pad in PolyUrethane molded

### SPECIFICATIONS:

Voltage & Frequency: 220-240V~ 50/60Hz (CE/CN version)  
100-127V~ 50/60Hz (UL/JP version)

Power Consumption: Rated 800W  
(Maximum 1200W)

Free Speed: 700-2500rpm

Weight: 4-1/4lbs (2.0kg)

Gear System: Two-level Deduction

### ELECTRIC ROTARY POLISHER 800W 700-2500RPM



MADE IN CHINA

DO NOT DISCARD - GIVE TO USER



Model:  
**EP800** **G1+**

Product Type:  
**ELECTRIC ROTARY POLISHER**  
800W 700-2500RPM

## GENERAL SAFETY RULES

**WARNING:** Read all instruction. Failure to follow all instructions listed below may result in electric shock, fire and/ or serious injury. The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

### WORK AREA

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

### PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while peration power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

### POWER TOOL USE AND CARE

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in ahazardous situation.

### SERVICE

- Have your power tool serviced by a qualified repair person using only identical replacements parts. This will ensure that the safety of the power tool is maintained.


## INSTRUCTIONS FOR POLISHING OPERATIONS

### INSTALL AND REMOVE ACCESSORIES

1. To install hook and loop pads, unplug the tool and place it on tool rest with spindle upright.
2. Use wrench to lock the spindle. Then attach hook and loop backing pad onto spindle.
3. Spin the backing pad clockwise until it is securely hand tightened.
4. Align the backing pad with the foam pad's recessed area, attach the foam pad to the backing pad, and make sure the backing pad fastens the foam pad.
5. To remove, "peel" off the foam pad. Use wrench to lock the spindle, and rotate backing pad counterclockwise to remove.

### STARTING, STOPPING AND CONTROLLING SPEED

The polisher features a dial speed control, which controls the polisher's maximum rotations per minute. The speed will remain variable to the chosen dial setting by use of the trigger switch. Dial settings range from 1 through 6. Lower numbers correspond to lower speeds and higher numbers correspond to higher speeds. Generally, lower speeds are recommended for tight work areas and higher speeds are ideal for large surface areas. Use the setting that best suits your job. To control the speed, set the dial to the desired number. To start the tool, pull the trigger. To stop the tool, release the trigger. For continuous operation, press the switch lock button to lock the trigger, pull the trigger again to stop the tool.

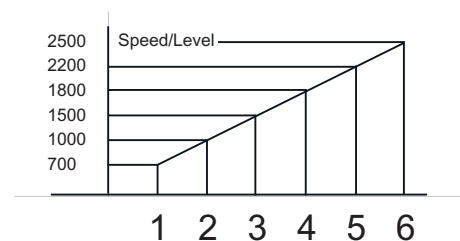

### PREPARE THE SURFACE

For best results, the surface should be clean and dry. Most high-gloss surfaces can be cleaned with a mild soap and water solution. For removal of stubborn dirt such as road tar, grease, and bug stains, you can use a mild ammonia solution such as that used in glass cleaners. Before using any cleaning product,



Model:  
**EP800** **G1+**

Product Type:  
**ELECTRIC ROTARY POLISHER**  
800W 700-2500RPM

check the label for recommended applications and follow the directions for use. Never apply cleaner directly onto surface to be polished. Apply to a clean cloth then use the cloth to clean the surface. Do not use any type of abrasive cleanser as it may damage or scratch the surface.

### APPLY POLISH TO THE FOAM PAD

Most polishes are either in paste or liquid form. Before using any polish read all directions on appropriate applications and proper use.

- For paste  
Use a putty knife or other flat, blunt object to apply approximately one rounded teaspoon of paste onto the foam pad. Evenly spread the paste over the entire surface of the foam pad. Do not apply paste directly to the surface being polished.
- For liquid  
Apply a small circle of liquid (about the size of a half-dollar) around the center of the foam pad, followed by two more rings, each slightly larger than the previous one. After the first application, the foam pad will not absorb as much polish. So apply just two rings, using half of the initial quantity.

### POLISHING

While holding the polisher firmly against the surface, turn on the polisher to begin. Always start and stop the polisher on or against the surface being polished. Begin by polishing larger flat surfaces, such as hood, trunk and roof. Do not press down on the surface with the polisher. Move the polisher back and forth in long, sweeping strokes. Too much pressure, the wrong angle or improper motion may cause swirl marks or burning. For detailed polishing instructions, read the instructions provided with your finishes, waxes and polishes.

## WARNING

To reduce the risk of injury, keep the cord set away from the path of the polisher. Otherwise the cord set may become caught by the pad and wrap around the spindle; this may cut through the cord and expose live wires or make the gear box electrically "live."

### PREVENTING BURNING THROUGH PAINT

It is easy to burn through the paint on a surface. This can occur if you polish at too high a speed or if you allow the polishing pad to stay in one spot for even a short period of time. To prevent burning through paint, use very light pressure and keep the polisher moving constantly, especially when working near edges or where there are abrupt changes in the contour of the work surface.

### PREVENTING SNAGGING

Snagging occurs when polishing pads get caught on rough edges of a work surface. Snagging can cause the tool to suddenly "kick back" and it may cause the pad to burn through the paint. To reduce the risk of snagging, use the polisher at low speeds when polishing rough surfaces. For tricky areas such as near trim or between a mirror and window on a car, do not take chances with a polisher. Polish these surfaces by hand. Or use the "coast-down" technique to avoid snagging. To coast-down, turn the motor ON for a few seconds, then turn it OFF and apply the polishing pad to the surface. This way, when the pad touches the work surface, it will be rotating more slowly than it is when the motor is ON. Use coast-down when working in areas where crevices or pockets are present.

### MAINTAINING TOOLS

Keep your tool in good repair by adopting a regular maintenance program. Before use, examine the general condition of your tool. Inspect switches, tool cord set and extension cord for damage. Check for loose screws, misalignment, binding of moving parts, improper mounting, broken parts and any other condition that may affect its safe operation. If abnormal noise or vibration occurs, turn the tool off immediately and have the problem corrected before further use. Do not use a damaged tool. Tag damaged

tools "DO NOT USE" until repaired. Under normal conditions, relubrication is not necessary until the motor brushes need to be replaced. After six months to one year, depending on use, return your tool to the nearest service facility for the following:

- Lubrication
- Brush inspection and replacement
- Mechanical inspection and cleaning (gears, spindles, bearings, housing, etc.)
- Electrical inspection (switch, cord, armature, etc.)
- Testing to assure proper mechanical and electrical operation

## WARNING

To reduce the risk of injury, always unplug your tool before performing any maintenance. Never disassemble the tool or try to do any rewiring on the tool's electrical system.

### CLEANING

Clean dust and debris from vents. Keep the tool handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean your tool since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include: gasoline, turpentine, and lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

## WARNING

To reduce the risk of injury, electric shock and damage to the tool, never immerse your tool in liquid or allow a liquid to flow inside the tool.

### REPAIRS

If your tool is damaged, return the entire tool to the nearest service center.

## CAUTIONS FOR USE

- 1) Only use the polishing pads as recommended by the manufacturer.
- 2) It is forbidden to use the grinding wheels and cut-off wheels on this tool.
- 3) Ensure the max. operating speed of the pad is higher than the rated speed of the power tool.
- 4) Always wear safety approved ear protection and safety glasses when using this tool. Gloves and protective clothing are recommended.
- 5) Personal protection and dust collection devices shall be chosen according to the material been worked upon. Please consult provider of such devices.
- 6) Release the start and stop device in case of failure of energy supply.
- 7) Only use the lubricant recommended by the manufacturer.